



USER MANUAL

HIGH-SPEED CONVECTION OVENS SPRIZ

REV.001

ORIGINAL INSTRUCTIONS: IT


52LIB00283

SUMMARY

DIGITAL CONTROL PANEL 2.4 LCD DISPLAY.....	4
4.1 HOME SCREEN.....	5
4.3 WIZARD TO SHOW A COOKING MANUAL	5
4.3.1 SET THE COOKING TEMPERATURE.....	6
4.3.2 SET THE COOKING TIME.....	6
4.3.4 REGULATION OF STEAM/HUMIDITY	7
4.3.5 SETTING THE FAN SPEED.....	7
4.3.6 MULTI-STEP RECIPE CREATION	8
4.3.7 PREHEATING PHASE.....	9
MENU LIST	10
MENUS FOR FINAL PROGRAMMES	10
RECIPE LIST MENU	11
SPECIAL CYCLE MENU	12
8.1 RAPID COOLING.....	12
8.4 MULTI-TIMER PROGRAM.....	13
SERVICE MENU.....	14
9.1 ACCESS TO PARAMETERS	14
9.2 USB FUNCTIONS	17
9.2.1 FIRMWARE UPDATE FROM USB	18
9.2.2 UPDATE LANGUAGES FROM USB	18
9.2.3 HACCP EXPORT TO USB	19
9.2.4 EXPORT RECIPES TO USB	20
9.2.5 IMPORT RECIPES FROM USB	21
9.2.6 IMPORT PARAMETERS FROM USB.....	22
9.2.7 IMPORT IMAGES FROM USB.....	23
9.2.8 IMPORT RECIPES + IMAGES FROM USB.....	24
9.2.9 FULL FIRMWARE UPDATE FROM USB.....	24
9.3 DIRECT CONNECTION TO SMARTPHONE	25
9.4 CONNECTION TO WI-FI NETWORK AND CLOUD SERVER ..	27
9.5 MACHINE INFORMATION.....	28
9.6 LANGUAGE SETTINGS.....	29
9.7 SETTING UP DATE AND TIME.....	29
9.8 IMAGE DELETION.....	30
MENU CHANGE RECIPE	31
10.1 SAVE A RECIPE	31

10.2 COPY A RECIPE	32
10.3 RENAME A RECIPE.....	33
10.4 DELETE A RECIPE.....	33
10.5 LINKING A RECIPE TO AN IMAGE	34
10.6 DISASSOCIATE A RECIPE TO AN IMAGE	34
10.7 QUICK RECIPE CHANGE (WEB SERVER).....	35
10.8 SET UP A RECIPE WITH DELAYED START	36
SELECTION OF A RECIPE WITH FAVORITE KEYS.....	37
11.1 TEMPORARY MODIFICATION OF A RECIPE.....	37
11.2 STARTING, PAUSING OR INTERRUPTING A RECIPE	37


DIGITAL CONTROL PANEL 2.4 LCD DISPLAY

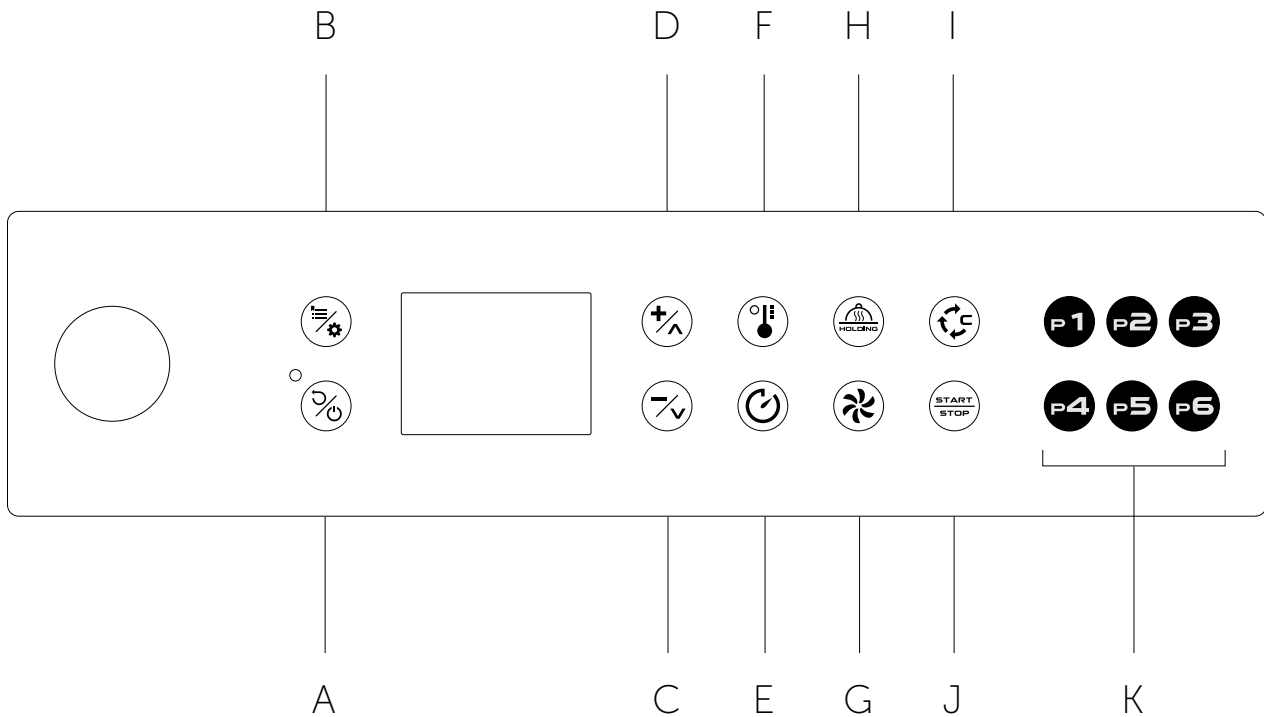

- A. ON/OFF BUTTON
- B. MENU BUTTON
- C. MINUS/DOWN BUTTON
- D. OVER/OVER BUTTON
- E. TIME BUTTON
- F. TEMPERATURE BUTTON
- G. CONTROL BUTTON FOR VENTILATION
- H. TEMPERATURE HOLDING BUTTON
- I. PHASE/CYCLE BUTTON
- J. START/STOP BUTTON
- K. SHORTCUT PROGRAMMES BUTTON

4.1 HOME SCREEN

The single press of the ON/OFF button, leads to activate the ON status of the card.

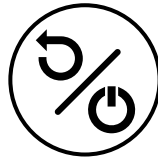

If the card is already in the ON state, pressing the ON/OFF button for a long time will bring you to the standby state.

If the card remains in the ON state for a parameter-defined downtime, it automatically returns to the standby state.

The home page shows the default manual cooking screen. At the bottom of the display, there are some status icons and in the central field is always shown the actual temperature of the room when we are not cooking, while when we are cooking we have the current time.

The managed status icons are:

- Symbol indicating active heating (heating elements on).
- WiFi presence signal.
- Warning triangle
- Symbol for light room.
- Pause sign/ play, to indicate the state of cooking when you open or close the door.

4.2 MANUAL COOKING AND COOKING WITH RECIPE

In manual cooking, the user, based on his experience, sets the desired cooking parameters for one or more cooking steps.

The cooking time is set to time (e.g. 1:40 hours:minutes) it will end at the end of the latter (0.00); In recipe cooking, previously stored recipes are used by the user. The equipment can hold up to 99 recipes.

4.3 WIZARD TO SHOW A COOKING MANUAL


By pressing the ON/OFF button, the oven switches to ON status and loads a manual cooking program with default values.

All programs including the manual one have the automatic preheating function in which set-point is equal to the set of the first phase increased by 20%.


Up to 100 programs with up to four phases each can be stored in the card and the following cooking settings are provided to be adjusted for each phase:

- Temperature set
- Time set
- Fan speed

4.3.1 SET THE COOKING TEMPERATURE

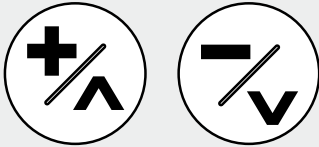 Press the button TEMPERATURE	 Set the temperature value by pressing the PLUS and MINUS buttons	 Press the button TEMPERATURE to confirm
---	---	--

4.3.2 SET THE COOKING TIME

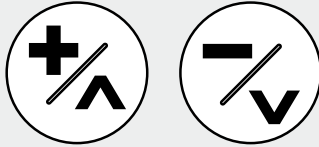 Press the button TIME	 Set the time value by pressing the PLUS and MINUS buttons	 Press the button TIME to confirm
--	--	---


4.3.4 REGULATION OF STEAM/HUMIDITY

Pressing the  button activates the program that maintains the oven at the preset temperature. During a recipe cycle, the "Temperature Holding" program automatically deactivates. Once the recipe is completed or interrupted, and the food has been removed from the oven, the "Temperature Holding" program will resume its function. The status bar, with the icon , will indicate that the program is active. To deactivate it, press and hold the same button.

4.3.5 SETTING THE FAN SPEED

The furnace has five different fan/motor speeds.

To adjust the fan speed:

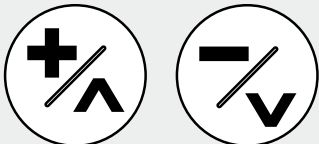 Press the button REGULATION VENTILATION	 Set the value using the PLUS and MINUS buttons	 Press the button REGULATION VENTILATION to confirm
---	--	---

During preheating, it is NOT possible to change the fan speed.


4.3.6 MULTI-STEP RECIPE CREATION

Each program, including the manual program, may consist of:

1. A pre-set preheating phase and up to 3 cooking phases.
2. A fixed preheating cycle and up to 4 cooking steps.

To create a recipe with multiple steps:

- Access the manual cooking screen and set the parameters of the first phase.
- Press the FASI button to enter the second phase or press the START/STOP button to start cooking.

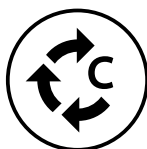

- Set the desired parameters for the second stage.
- Press the PHASES button to enter the third stage or press the STAR/STOP button to start cooking.
- Set the desired parameters for the third stage or press the STAR/STOP button to start cooking.
- Press the PHASES button to enter the fourth step.
- Set the desired parameters for the fourth stage.
- Press the STAR STOP button to start cooking.
- To cancel a phase it is necessary to bring the set-time of the phase to the value zero.

ATTENTION!

- You cannot set 0 time for the first step.
- If in any phase the set time is infinite, it will not be possible to set a time for the subsequent phases.
- It is not possible to set infinite time on a phase, if one of the following phases is enabled;
- It is not possible to delete a phase if the next one is an active phase vice versa it is possible to disable from time to time only the last active phase);
- During a cooking cycle it is possible to force the transition to the next phase before the time of the current phase expires, setting the cooking time of the current phase to zero.

4.3.7 PREHEATING PHASE

Each program, including the manual cycle, can have its own preheating phase.

To enable the preheating phase, by pressing the PHASES button, select the preheating phase (P), pressing the TEMPO key you can enable or disable the preheating phase.

There are several modes of operation of the preheating phase that the user can select by changing the parameter P20 (See paragraph "Access to parameters"):

- P20 = 0 Preheating disabled
- P20 = 1 The temperature of the preheat is equal to the temperature of phase 1 increased by 20%, you can disable the preheat.
- P20 = 2 The temperature of the preheat is set equal to the temperature of phase 1 increased by 20 °C (68 °F), you can disable the preheating.
- P20 = 3 The user manually sets the value of the preheating temperature.
- P20 = 4 The temperature of the preheat is equal to the temperature of phase 1 increased by 20%, it is not possible to change or deactivate the preheating phase.


To disable or change the preheating:

- Select the desired program or access a manual cooking.
- Select the "P" phase by pressing the FASl button.
- If the value of P20 is set to 1 or 2, you can only deactivate it by pressing the TEMPO button.
- If P20 is set to 3, however, you can adjust the fan temperature and speed.
- Press the PHASES button to return to the first stage of cooking.

When the preheating temperature is reached, the buzzer is activated and the light flashes. The preheating temperature is maintained in the cooking chamber until the door is opened. When the oven door is closed, the first phase of the cooking cycle is automatically started. The buzzer that signals the preheating temperature is silenced when the door is opened or when any button is pressed. If during the preheating phase, and Before the preheating temperature is reached, the oven door is opened, the preheating phase is interrupted.

MENU LIST

Repeatedly pressing the MENU button (when no cooking cycle is in progress) scrolls through the menu list:

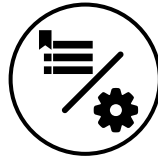

- Menu last used programs
- Recipe list menu
- Special cycle menu
- Menu service

By holding down the MENU button (when a cooking cycle is not in progress) in a new program or a recipe already saved, you access the recipe editing menu.

MENUS for FINAL PROGRAMMES

In this menu you can see the last 10 cooking programs used. In this menu you can access the cookbook.



Press MENU and scroll with + or - the programs in the list of your choice



Press MENU to confirm the program



Press START/STOP to start the selected program

RECIPE LIST MENU

The recipe book is divided into five categories; within them you can save up to a maximum of 100.

Each program can be saved in up to four steps.

The use of the programs allows to standardize the cooking processes and always guarantee the same quality of result.

To start a program from the cookbook:



Press MENU and scroll with + or - the programs in the list of your choice



Press MENU to confirm the program



Select the program with the PLUS and MINUS keys




Confirm by pressing the MENU button



Press the button START/STOP to start the program

SPECIAL CYCLE MENU

In this menu you can access the special cycles:

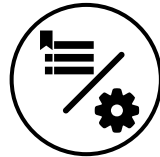

- Rapid cooling
- Multi-timer

8.1 RAPID COOLING


To start the Rapid Chamber Cooling cycle:



Press MENU and scroll with + or - the programs in the list of your choice



Press MENU to confirm the program

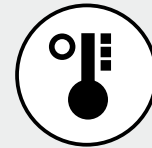

Set the temperature you want to reach at the end of the cycle



Set the desired fan speed




Press the START/ STOP button to start the program

On the top of the screen is displayed a progressive bar that represents the progress of the cycle as the temperature of the cooking chamber decreases. The rapid cooling cycle ends when the temperature of the chamber is lower than the set value. The rapid cooling cycle can be carried out both when the door is open and when the door is closed. With the door closed, water is injected into the cooking chamber to accelerate the process.

8.4 MULTI-TIMER PROGRAM

The multi-timer cycle allows you to manage different timers during the same cycle. It then allows you to cook several products at the same time with different preparation times by means of a single cycle.

To start the special cycle "Multitimer":

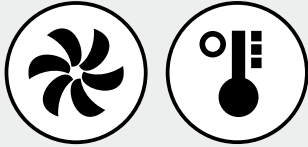 Press MENU and scroll with + or - the programs in the list of your choice	 Confirm by pressing the MENU button	 Set temperature and speed of fan as more you want
 Press the START/STOP button to start the program		

At this point control starts an infinite time cycle with parameters corresponding to those set.

To activate the individual timers:

- Select the desired timer by pressing the PLUS and MINUS buttons.
- The timer in selected changes color and the relative text is highlighted in red.
- Activate the selected timer change by pressing the TIME button and set the desired value by pressing the PLUS and MINUS buttons.
- Confirm the value setting by pressing the TIME button.

- The timer will start counting once the appliance door is opened and closed.
- If two or more timers are set before the door is opened, they are all started at the same time when the door is opened and closed.
- At the bottom of the screen, during the cycle, there will be status icons and in the central area the temperature of the cooking chamber is shown.
- To stop the cycle, press the START STOP button.

SERVICE MENU

In this menu you can access the following machine functions:

- Parameters
- USB function
- Wi Fi connection - webserver / Connection info
- Machine information
- Tongue
- Date and time
- Delete images from programs

9.1 ACCESS TO PARAMETERS


To access the parameter setting menu:



Select the service menu by repeatedly pressing the MENU button




Select the item "Parameters" acting on the keys PLUS and LESS

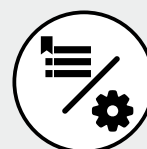

Confirm with the MENU button

A login password is required for this section.

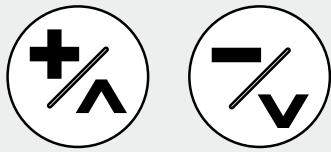


Enter the password
with the PLUS and
MINUS keys
(user password is: 30)




Confirm with the
MENU button


- If the password entered is incorrect, the control is placed on the main menu.
- By pressing the PLUS and MINUS buttons, you can scroll through the list of parameters:

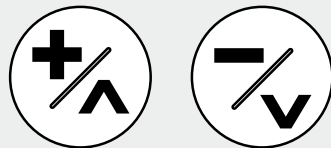

Select the
parameter
to change

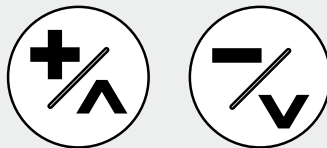

Set the value of
the parameter
within set limits by
pressing the PLUS
and MINUS buttons

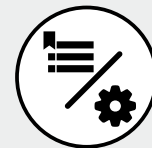

Confirm with the
MENU button

Exit the parameter menu by pressing the ON/OFF button, alternatively the output from the menu is automatically after 2 minutes of inactivity.

All the parameters that can be modified are listed below:

PARAMETER	DESCRIPTION	VALUE	LIMITS	UNITS OF MEASURE
P01	Unit of measurement temperature - 0=°C - 1=°F	0	0-1	NUMBER
P06	Default setpoint cooking	150	30-260	°C
P09	Default Set Point Cooling	50	30 ÷ 70	°C
P11	Time Max Phase	240	60 ÷ 599	Minutes
P12	Default cooking time extension	1	1 ÷ 999	Minutes
P13	Delay to prolong the cooking	120	1 ÷ 600	Seconds
P20	Preheating mode 0= disabled + 3 cooking steps 1= delta % from temp. phase 1 + 3 stages cooking 2= delta C from temp. stage 1 + 3 stages cooking 3= manual temp set. + 3 cooking steps 4= preheating at fixed % + 4 cooking steps	4	0 ÷ 4	Number
P21	Delta preheating in manual mode	25	0 ÷ 100	% / °C
P24	Editable percentage P20=4	25	0 ÷ 100	%
P25	Active preheating in manual program	1	0 ÷ 1	Flag
P120	Oven lights mode on: 0=timed on key press, 1=always on while cooking, 2= always on in ON	1	0 ÷ 2	Flag
P121	Lights activation time (for P120=0)	45	0 ÷ 120	Seconds
P138	Default heart probe temperature	50	0 ÷ 110	°C
P140	Buzzer sound (0=always plays)	0	0 ÷ 999	Seconds
P204	Oven downtime for automatic stand-by switching	10	0 ÷ 60	Minutes
P220	Program number associated with key P1 - 0 = no associated program	0	0 ÷ 100	Number
P332	Set camera Multi-timer	0	0 ÷ 100	°C
P333	ND			
P351	ND			
P352	ND			
P380	ND			
P381	ND			
P382	ND			
P391	"Temperature holding" program temperature	250	50 ÷ T max	°C
P400	ND			
P500	Log time for HACCP - 0 = HACCP log disabled	5	0 ÷ 10	Minutes
P501	Delta temperature for Log HACCP (*)	5	0 ÷ 30	°C

9.2 USB FUNCTIONS

The USB menu allows the following operations:

- Update firmware (only appears if compatible file is detected).
- Update languages (only appears if compatible file is detected).
- Export HACCP.
- Export recipes.
- Import recipes (only appears if compatible file is detected).
- Import parameters (only appears if compatible file is detected).
- Import images (only appears if .jpg file is detected in the appropriate sub-folder).
- Import recipes + pictures.
- Full update (only appears if a compatible file group is detected).

If you try to access this menu without USB, a message appears that warns of the lack of the stick.

9.2.1 FIRMWARE UPDATE FROM USB

To start an update:


- Upload the update files to a USB stick. Use only and exclusively released by the manufacturer.



Select the service menu by repeatedly pressing the MENU button



Select the item "USB" acting on the keys PLUS and MINUS

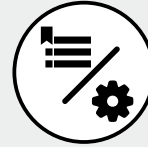

Confirm with the MENU button


Upon confirmation, the first phase of the firmware update starts and may take a few minutes.



At the end of the first phase of update, pressing the START STOP button starts the second and last phase of update that can take a few minutes. At the end of the process, the control is switched to stand-by mode

9.2.2 UPDATE LANGUAGES FROM USB

To start an update:

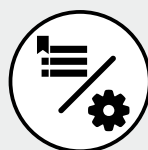


Select the service menu by repeatedly pressing the MENU button



Select the item "USB" acting on the keys PLUS and MINUS



Select the item "Update languages" acting on the buttons PLUS and MINUS

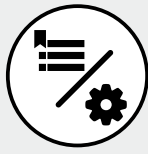

Confirm with the
MENU button

- Upon confirmation, the update starts and can last a few minutes.
- At the end you send a notification message.



Press the ON/OFF
button several times
to return to home



ATTENTION!



The language update procedure irreversibly deletes the previously present database and may take a few minutes.

9.2.3 HACCP EXPORT TO USB

To export the HACCP log:




Select the service
menu by repeatedly
pressing the
MENU button




Select the item
"USB" acting on
the keys PLUS
and MINUS



Select the item
"Export HACCP"
acting on the keys
PLUS and MINUS

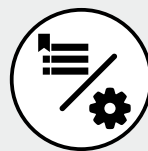

Confirm with the
MENU button

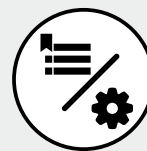

Confirm with the
MENU button
again to start the
process



A notification message appears at the end of the process.
Press the ON/OFF button repeatedly to return to the homepage

The HACCP export procedure allows you to save the operating data stored in the control on the USB stick.

A file is exported for each day of use with a name of type yy_mm_dd and extension ".csv".

Each log file is accompanied by a file with identical name, but extension ".md5", which allows the integrity verification.

The exported operation data identifies a possible set of events:

- The start event
- The event of phase change
- The event stops or at the end of the cooking cycle
- Possible alarm conditions
- One recording every 5 minutes of:
 - Temperature
 - Set point
 - Missing time at end of phase
 - Duration of the phase
- One recording every five degrees of temperature change in the room.

9.2.4 EXPORT RECIPES TO USB

To export all recipes:


- Insert the USB stick with UTRIC file*. cvs:



Select the service menu by repeatedly pressing the MENU button




Select the item "Parameters" acting on the keys PLUS and LESS (user password is: 30)

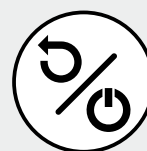

Return to the service menu and select "USB then "Export recipe"



Confirm with the
MENU button

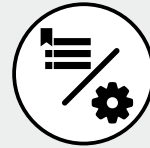

Confirm with the
MENU button again
to start the process



At the end of the process, an end-of-process pop-up appears. Press the ON/OFF button repeatedly to return to the homepage

9.2.5 IMPORT RECIPES FROM USB

To import all recipes:


- Insert the USB stick with UTRIC file*. cvs:



Select the service
menu by repeatedly
pressing the MENU
button




Select the item
"Parameters" acting on
the keys PLUS and LESS
(user password is: 30)

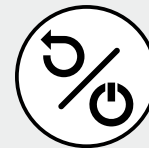

Return to the service
menu and select "USB
then "Import recipe"



Confirm with the
MENU button

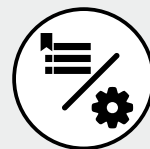

Confirm with the
MENU button again
to start the process



At the end of the process, an end-of-process pop-up appears. Press the ON/OFF button repeatedly to return to the homepage

9.2.6 IMPORT PARAMETERS FROM USB



ATTENTION!



Incorrect import of parameters can lead to irreversible malfunction of the equipment

To import the parameters:

- Upload the update files to a USB stick. Use only and exclusively released by the manufacturer.



Select the service menu by repeatedly pressing the MENU button



Select the item "USB" acting on the keys PLUS and MINUS




Select the item "Import parameters" acting on the keys PLUS and MINUS



Confirm with the MENU button

- Upon confirmation you start updating the database which may take a few minutes.
- A notification message appears at the end of the process.

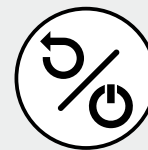

Press the ON/OFF button several times to return to home

9.2.7 IMPORT IMAGES FROM USB

By means of the procedure it is possible to import a series of images (subject recipes).

The Image Files to import must have the following features:

- They must be located inside a folder named "jpg".
- They must have ".jpeg" format and extension. 300x160 pixels resolution is recommended
- Must have a maximum size of 64Kbytes

To import the images:

- Insert into a USB stick containing a single folder named "jpg" containing all the images to import.



Select the service menu by repeatedly pressing the MENU button



Select the item "USB" acting on the keys PLUS and MINUS



Select the item "Import images" acting on the keys PLUS and LESS



Confirm with the MENU button

- Upon confirmation you start updating the database which may take a few minutes.
- A notification message appears at the end of the process.



Press the ON/OFF button several times to return to home



ATTENTION!



With this operation, all previously uploaded images are irreversibly removed from the database control memory.

9.2.8 IMPORT RECIPES + IMAGES FROM USB

With this feature you can import recipes and associated images via a single procedure.

To import recipes and associated images:

- Insert into a USB stick containing:
 - A single folder named "jpg" containing all the images to import.
 - The recipe file properly prepared.



Select the service menu by repeatedly pressing the MENU button



Select the item "USB" acting on the keys PLUS and MINUS



Select the item "Import recipes + images" acting on the buttons PLUS and MINUS



Confirm with the MENU button

- Upon confirmation you start updating the database which may take a few minutes.
- A notification message appears at the end of the process.



Press the ON/OFF button several times to return to home

9.2.9 FULL FIRMWARE UPDATE FROM USB

To start an update:

- Upload the update files to a USB stick. Use only and exclusively released by the manufacturer.



Select the service menu by repeatedly pressing the MENU button



Select the item "USB" acting on the keys PLUS and MINUS



Select the item "Massive Update" acting on the keys PLUS and MINUS



Confirm with the MENU button

- The confirmation of the process starts the first phase of the firmware update which may take a few minutes.
- At the end of the first phase of update, pressing the START STOP button starts the second and last phase of update that can take a few minutes.
- At the end of the process, the control is switched to stand-by mode.



ATTENTION!



This procedure updates all the scan operation files simultaneously. If there are not all the necessary files inside the USB key, the function is not available on the selection menu.

9.3 DIRECT CONNECTION TO SMARTPHONE

You can create a direct connection between your smartphone and the equipment. The direct connection allows to access locally (within about 6 meters from the device) to the cookbook via smartphone and/ or to perform the necessary operations to connect to a Wi-Fi network.

To connect the equipment directly to a Smartphone:

- Turn on the appliance.



Press the ON/OFF button to return to home

- Scan the FIRST qrcode "Connect" that is displayed on the screen using a Smartphone with Internet connection.
- Accept the network connection on the Smartphone screen.
- Wait for the connection between the Smartphone and the equipment to be established.



Press the MINUS button for connection and the SECOND QRCode

- Scan the SECOND qrcode that appears on the screen using the previously used Smartphone.
- Confirm access to the proposed website on the Smartphone screen.
- The Smartphone displays a screen that allows you to access the device's cookbook then press the button "Go to the cookbook"



Press ON/OFF to disconnect the Smartphone

- The structure of the recipe book where you can navigate to view, create, edit, save, associate images or delete recipes is displayed on your smartphone.

9.4 CONNECTION TO WI-FI NETWORK AND CLOUD SERVER

To connect your equipment to the Cloud Server:



Press the ON/OFF button to return to home

- Scan the FIRST qrcode "Connect" that is displayed on the screen using a Smartphone with Internet connection.
- Accept the network connection on the Smartphone screen.
- Wait for the connection between the Smartphone and the equipment to be established.



Press the MINUS button for connection and the SECOND QRCode

- Scan the SECOND qrcode that appears on the screen using the previously used Smartphone.
- Confirm access to the proposed website on the Smartphone screen.
- A screen is displayed on the Smartphone screen that allows you to connect the equipment to a Wi-Fi network. then press the button "Connect oven".



Press ON/OFF to disconnect the Smartphone

- Select one of the proposed available networks you want to access (if no networks are made available automatically press the button "Scan networks"). Enter the Wi-Fi network password and press the "Connect" button.
- Wait until the green field with "Online" appears. Disconnect from the device via the smartphone's Wi-Fi connection management menu.



Press MINUS four times until the "Chefcloudconnect" qrcode appears on the screen

- Scan the qrcode that appears on the screen using your Smartphone.
- Press the "Copy Text" button displayed on your Smartphone.
- Open a Browser page and paste the text.
- Follow the instructions on the web page to configure the CLOUD connection.



ATTENTION!



For more information request the dedicated user manual

9.5 MACHINE INFORMATION


To access the device information:



Select the service menu by repeatedly pressing the MENU button



Select the item "Info" acting on the buttons PLUS and MINUS

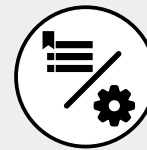

Confirm with the MENU button

The following information is displayed on the screen:


- The firmware version
- The release date of the firmware
- The serial or serial number.



Press the ON/OFF button several times to return to home

9.6 LANGUAGE SETTINGS

To change the device language:

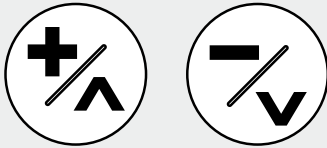
 Select the service menu by repeatedly pressing the MENU button	 Select the item "Language" acting on the keys PLUS and MINUS	 Confirm with the MENU button
---	---	---

Select the nationality of the desired language

 Confirm with the MENU button	 Press the ON/OFF button several times to return to home
--	--


9.7 SETTING UP DATE AND TIME

To change the date and time of your device:

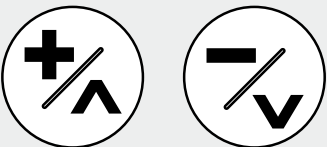 Select the service menu by repeatedly pressing the MENU button	 Select the desired item by pressing the PLUS and MINUS buttons	 Confirm with the MENU button
---	---	---



Confirm with the
MENÙ button

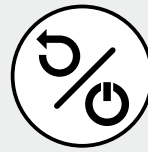

Press the ON/OFF
button several times
to return to home



ATTENTION!



If the equipment is connected to a Wi-Fi network, the date and time setting section will not be available. The necessary information is automatically set via the network.

9.8 IMAGE DELETION


To delete images from the library:



Select the service
menu by repeatedly
pressing the MENU
button



Select "Delete
images" by pressing
the PLUS and
MINUS keys

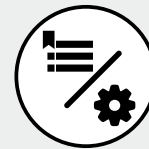


Confirm with the
MENÙ button



Select the image
to be deleted using
the PLUS and
MINUS buttons



Confirm with the
MENÙ button

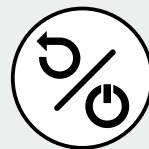

Press the ON/OFF
button several times
to return to home


MENU CHANGE RECIPE

By means of this menu it is possible:

- Save - Save a new recipe
- Copy - Copy a recipe
- Rename - Rename a recipe
- Cancel - Delete a recipe permanently
- Associate - Associate a recipe to an image
- Disassociate - Dissociating a recipe to an image
- Quick Edit - Change a recipe by means of direct connection to Smartphone
- Delayed Start - Set a Delayed Start Recipe


10.1 SAVE A RECIPE

To save a new recipe or save changes made to a recipe:

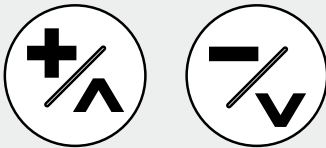 Press and hold the menu button	 Select "Save" by pressing the PLUS and MINUS buttons	 Confirm with START/STOP button
---	---	---

Set the recipe name to a maximum of 20 characters:


- You can scroll through the letters by acting on the buttons PLUS and LESS
- Confirm the selected letter and proceed to the next one by pressing the MENU button
- Enter any spaces between letters by pressing the TIME button
- Delete letters by pressing the TEMPERATURE button

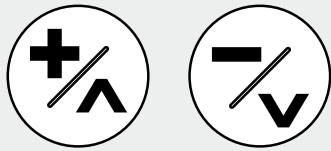

Then select the category acting on the keys PLUS and LESS



Confirm with the MENU button

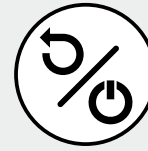

Press the ON/OFF button several times to return to the home and view the recipe


To exit the saved recipe, go back to Recipe List and select Manual.

10.2 COPY A RECIPE

To copy a recipe:



Press and hold the menu button on the saved recipe

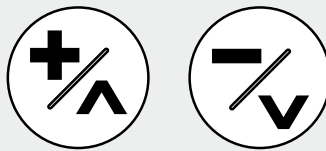


Select "Copy" by pressing the PLUS and MINUS buttons



Confirm with START/STOP button

Set the recipe name to a maximum of 20 characters:


- You can scroll through the letters by acting on the buttons PLUS and LESS
- Confirm the selected letter and proceed to the next one by pressing the MENU button

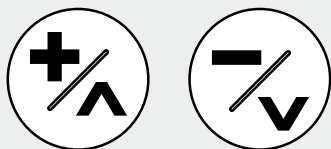

Then select the category acting on the keys PLUS and LESS



Confirm with the MENU button

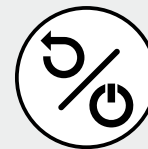

Press the ON/OFF button several times to return to the home and view the recipe

10.3 RENAME A RECIPE

To rename a recipe:



Press and hold
the menu button
on the saved
recipe



Select "Rename" by
pressing the PLUS
and MINUS buttons




Confirm with
START/STOP button



Then select the
category acting
on the keys
PLUS and LESS



Confirm with the
MENÙ button

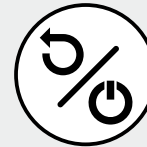

Press the ON/OFF
button several times
to return to the
home and view
the recipe

10.4 DELETE A RECIPE

To delete an existing program:



Press and hold
the menu button
on the saved
recipe




Select "Delete" by
pressing the PLUS
and MINUS buttons



Confirm with the
MENÙ button

10.5 LINKING A RECIPE TO AN IMAGE

To associate an image to a program:

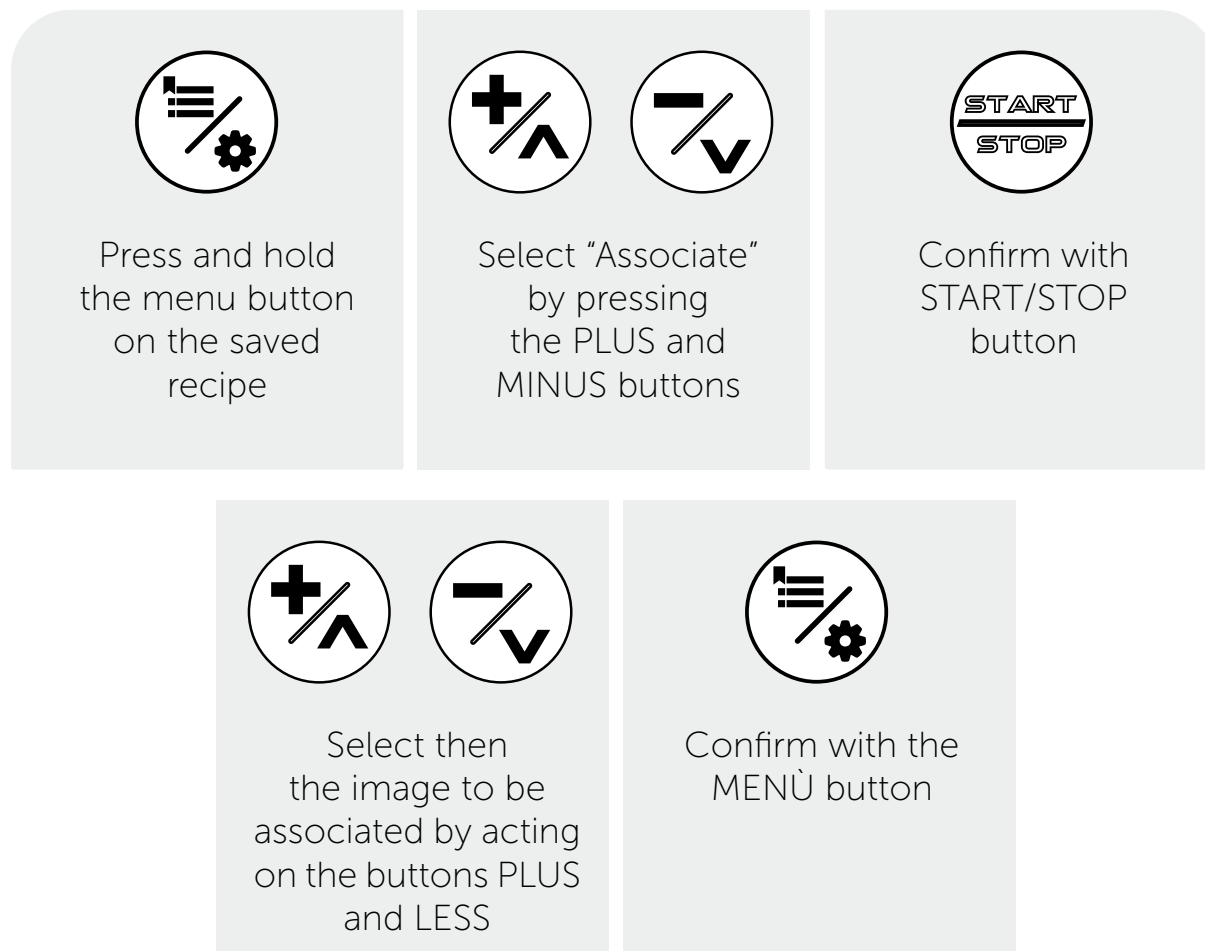

In case the USB stick is present with images inserted in the appropriate folder, after the last image in the local archive you start scrolling through the list of images on the USB memory. Selecting an image on the USB stick, it is imported into the equipment database.

10.6 DISASSOCIATE A RECIPE TO AN IMAGE

To disassociate an image from a program:



Press and hold
the menu button
on the saved
recipe



Select "Disassociate"
by pressing the PLUS
and MINUS buttons



Confirm with
START/STOP
button

10.7 QUICK RECIPE CHANGE (WEB SERVER)

The function of fast editing allows to modify a recipe by means of a direct connection with Smartphone.



Press the ON/OFF button from the oven and scan the first "Connect" qrcode displayed on the screen using a Smartphone.

- Accept the network connection on the Smartphone screen.



When the connection is established, scan the second qrcode by pressing the MINUS key 2 times, using the previously used Smartphone, and confirm access to the proposed website.

- A screen is displayed on the Smartphone that allows you to access the device's cookbook, then press the "Go to the cookbook" button.

By pressing "Go to the cookbook" you can access the oven cookbook, select the desired category and create or modify an existing recipe and then set the parameters, save, associate images or delete the recipe itself with your Smartphone.






ATTENTION!



To use this mode the display must always remain in this screen. If you press ON/OFF and return to the homepage you will lose your internet connection.

10.8 SET UP A RECIPE WITH DELAYED START

To start a recipe with delayed start:

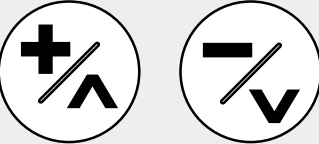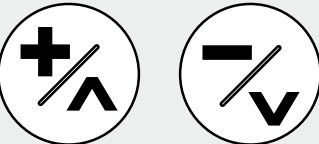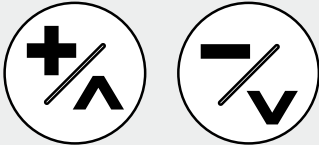 Press and hold the menu button on the saved recipe	 Select the entry "Late departure" acting on the buttons PLUS and MINUS	 Confirm with the MENU button
 Select the start period by pressing the PLUS and MINUS keys from the possible values: - Today - +24h - +48h		
 Confirm with the MENU button	 Set the desired start time ATTENTION 24h format [hh]:[mm]	 Then approve with the MENU button



ATTENTION!



Setting a delayed startup program does not allow other loops to run. To cancel a delayed start setting, simply press the ON OFF button.


SELECTION of a RECIPE with FAVORITE KEYS

You can quickly select a recipe by pressing one of your favorite P1-P6 keys (only if no other loops are running). The corresponding recipe is displayed and ready to start. Pressing one of the hotkeys to which no recipe has been associated will cause an acoustic error signal. No recipe is selected.

Prolonged pressing of one of the favorite buttons P1-P6 allows you to view the image associated with the corresponding recipe.

To associate a program to one of your favorite keys:

- Access the menu "Recipe list":

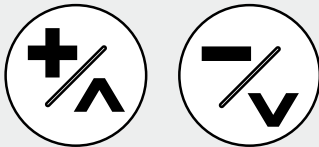 Select the desired recipe with the PLUS and MINUS buttons	- Press the favorites button that you intend to associate with the recipe. - You will then see a message with the confirmation request.	 Then confirm with the MENU button
---	--	---

11.1 TEMPORARY MODIFICATION OF A RECIPE

You can temporarily change the settings of a recipe both before and during execution. These changes are temporary and are not stored in the equipment memory.

11.2 STARTING, PAUSING OR INTERRUPTING A RECIPE

To start a selected recipe, simply press the START/STOP button.



Opening the started prescription port temporarily stops the loop, which resumes when the door is closed again. The pause symbol is displayed at the bottom of the screen to continue the cycle break.

The definitive stop of the recipe takes place at the end of the set time of the last cooking phase or by pressing the START/STOP button. At the end of the recipe, a notification message is displayed on the screen and an acoustic signal is issued.

The acoustic signal remains active until the door is opened or when any key is pressed.