

680.100 **SANDWICH TOASTER** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	Z-AT3-001	GUM FEET	1
2	Z-AT3-002	BOTTOM BOARD	1
3	Z-AT3-003	CERAMIC WIRING TERMINAL	1
4	Z-AT3-004	HEAT SHIELD	1
5	Z-AT3-005	OIL BASIN	1
6	Z-AT3-006	SWITCH	1
7	Z-AT3-007	TIMER	1
8	Z-AT3-008	BOX	1
9	Z-AT3-009	ELECTRIC HEATING TUBE BEARING (A)	1
10	Z-AT3-010	BURN THE GRILL	1
11	Z-AT3-011	ELECTRIC HEATING TUBE BEARING (B)	1
12	Z-AT3-012	INSULATION CERAMIC	1
13	Z-AT3-013	POWER CORD JACKET	1
14	Z-AT3-014	POWER CORD	1
15	Z-AT3-015	HEAT SHIELD	1
16	Z-AT3-016-7	ELECTRIC HEATING TUBE (120V/425W)	1
17	Z-AT3-017	CAP PLATE	1
18	Z-AT3-018	HEAT SHIELD	1
19	Z-AT3-019	SEAL THE BOARDS	1
20	Z-AT3-020	TIMER BUTTON	1
21	Z-AT3-021	SWITCH BUTTON	1
	Z-AT3-A01	CLIP	3