

688.014 **TOASTER** - SPARE PART LIST

NO	CODE	DESCRIPTION	Q'TY
1	Z-4ATS-001	POWER CORD	1
2	Z-4ATS-002	POWER CORD JACKET	1
3	Z-4ATS-003	BODY	1
4	Z-4ATS-004	HANDLE KNOB	1
5	Z-4ATS-005	SHAFT	1
6	Z-4ATS-006	SHAFT SPRING	1
7	Z-4ATS-007	RACK WELDING	1
8	Z-4ATS-008	SELECTOR SWITCH	1
9	Z-4ATS-009	TIMER	1
10	Z-4ATS-010	SET SCREW FOR TIMER	2
11	Z-4ATS-011	TIMER KNOB	1
12	Z-4ATS-012	SET SCREW FOR DECORATED BOARD	2
13	Z-4ATS-013	SET COVER FOR DECORATED BOARD	2
14	Z-4ATS-014	DECORATED BOARD	1
15	Z-4ATS-015	HEATING ELEMENT	3
15	Z-4ATS-015-1	HEATING ELEMENT	2
16	Z-4ATS-016	CONNECTION TERMINAL	3
17	Z-4ATS-017	FLAT WASHER	20
18	Z-4ATS-018	SPRING WASHER	10
19	Z-4ATS-019	CROSS RECESS HEAD SCREW	10
20	Z-4ATS-020	HEXAGONAL NUT	10
21	Z-4ATS-021	HEATING ELEMENT CONNECTION	7
22	Z-4ATS-022	BOTTOM BOARD	1
23	Z-4ATS-023	SET SCREW FOR BOTTOM BOARD	4
24	Z-4ATS-024	SET SCREW FOR RUBBER FOOT	4
25	Z-4ATS-025	SET NUT FOR RUBBER FOOT	4
26	Z-4ATS-026	RUBBER FOOT	4
27	Z-4ATS-027	TRAY	1
28	Z-4ATS-028	SET SCREW FOR HEATING ELEMENT PLATE	2
29	Z-4ATS-029	HEATING ELEMENT PLATE	1
30	Z-4ATS-030	HEATING ELEMENT SEPARATED MESH	8