



INSTALLATION, USE AND MAINTENANCE (TRANSLATION OF THE ORIGINAL INSTRUCTIONS)



Translation of the original instructions



SAFETY	4
INSTALLATION.....	14
MAINTENANCE.....	32

CONTACTS

Please see the back cover for contacts in your local area.

TECHNICAL DOCUMENTATION IN DIGITAL FORMAT

To download the documentation and full user manual in digital format, log in to **UNOX** <http://infonet.unox.com> | <http://unox.com>.

After registering on the portal, you will need to enter some information about your UNOX product:

- product code
- serial number

Both can be found on the ratings plate on the side of the oven (page **23**).



Dear Installer and Customer,

This manual contains all the information you need to use, install and maintain this appliance correctly.

Please read it carefully before assembling the appliance and store it safely for future reference.

If you do not fully understand any of the contents, please contact the manufacturer for further information.

Safety

Pictograms 4

Safety information for installing the appliance 5

Safety information for maintaining the appliance 8

PICTOGRAMS



Read the instruction manual



Danger! Situation presenting immediate danger, or a hazardous situation which could cause injury or death.



Risk of fire!



Risk of electric shock



Risk of burns



Electromagnetic radiation: do not open the compartments marked with this symbol



Tips and useful information



Consult another section



Earthing symbol



Equipotential symbol

SAFETY INFORMATION FOR INSTALLING THE APPLIANCE

General precautions

- **WARNING:** Read this manual carefully before installing the appliance. Store this manual carefully for future reference.
- **WARNING:** Failure to comply with the safety regulations, and any installation or maintenance other than those indicated in this manual voids the warranty* and relieves the manufacturer of all liability.
- **WARNING:** Interventions, tampering or modifications which have not been expressly approved and which do not comply with the instructions in this manual could cause damage, injury or death, and void the warranty*.
- **WARNING:** All non-routine maintenance must be performed exclusively by qualified technicians, authorised by the manufacturer, in compliance with the regulations in force in the user country and the regulations on systems and safety in the workplace.
- **WARNING:** Before starting any installation or maintenance work, disconnect the appliance from the electrical power supply and make sure that any hot parts of the machine have cooled to room temperature.
- **WARNING:** During installation and maintenance operations, personal protective equipment (PPE) must be used, such as protective gloves, safety shoes and dust-proof filter masks.

- WARNING: When the appliance is being fitted, people not involved with the installation may not pass through or occupy the work space.
- WARNING: The appliance must be transported using suitable means for the weight and size of the appliance. Please use personal protective equipment (PPE – gloves, safety shoes, etc.).
- WARNING: The packaging material is potentially dangerous. It must be kept out of the reach of children and animals, and correctly disposed of in compliance with local regulations.
- WARNING: The ratings plate provides essential technical information that is of utmost importance for any appliance maintenance or repairs. Do not remove, damage or modify the plate.
- WARNING: The parts protected by the manufacturer or one of its agents cannot be altered by the installer.
- WARNING: If the door or seal are damaged, do not use the oven until it has been repaired by a technician.
- WARNING: The appliance must be easily movable for any non-standard maintenance work. Make sure that any building work carried out following installation (e.g. building walls, replacing doors with narrower models, renovation work) does not hinder movement.
- WARNING: Instructions are available on the website.

Warnings for the electrical connections

- **WARNING:** Before installing the appliance, check that the systems are compliant with the installation standards in the specific country and with the specifications indicated on the appliance serial plate.
- **WARNING:** The electrical system has been designed in accordance with regulations IEC 60335-1 and IEC 60335-2-42 as regards the electrical safety of appliances for commercial and domestic use.
- **WARNING:** Connections to the power mains must comply with the regulations in force in the country where the appliance is installed.
- **WARNING:** The appliance must be connected directly to the power supply and must be fitted with an easily accessible switch, installed in the system in accordance with the regulations in force in the country in which the appliance is being installed. This switch must separate all pole contacts so as to guarantee complete disconnection in overvoltage category III conditions.
-  **WARNING:** There must be an earth connection made using a single, seamless cable, without interruptions (including the circuit breaker). The yellow/green earth wire must be at least 3 mm longer than the other wires.
-  **WARNING:** Each appliance must be included in an equipotential bonding system that complies with the regulations in force in the country where the appliance is installed.
- **WARNING:** The power supply cable must only be replaced by a qualified, authorised technician. The cable can only be replaced by a cable with the same characteristics with a yellow and green earth connection.

SAFETY INFORMATION FOR INSTALLING AND MAINTAINING THE APPLIANCE



General precautions

- **WARNING:** Please read this manual carefully before using and maintaining the appliance.
- **WARNING:** Failure to comply with the safety regulations, and any use or maintenance other than those indicated in this manual voids the warranty* and relieves the manufacturer of all liability.
- **WARNING:** Children must be supervised to ensure they do not play with the appliance.
- **WARNING:** User cleaning and maintenance must not be carried out by children.
- **WARNING:** These appliances are intended to be used for commercial applications, e.g. in restaurant kitchens, canteens, hospitals and commercial enterprises such as bakeries, butchers, etc., but not for continuous, mass production of food. Any use other than has been indicated is considered improper, potentially dangerous for people and animals, and may irreparably damage the appliance. Improper use of the appliance voids the warranty.
- **WARNING:** If the appliance is not working or if you notice any changes to the structure or operation, disconnect the electricity supply and contact an authorised UNOX customer assistance service. Do not attempt to repair the appliance yourself. For any repairs, please request UNOX original spare parts.

* For further information, ► go to www.unox.com under the "Warranty" section

- **WARNING:** To ensure that the appliance is in perfect condition in terms of use and safety, maintenance and inspections should be performed at least yearly by an authorised support service centre.
- **WARNING:** The appliance emits a sound level of below 70 dB.



Risk of burns and injury

- **WARNING:** While cooking and until all appliance parts have cooled, make sure to only touch the appliance control components or handle, because the external parts are extremely hot (temperature must be below 50°C | 122°F).
- **WARNING:** Cooking can only take place with the door closed, for safety reasons.
- **WARNING:** In order to maintain optimum performance, do NOT open the door during cooking. If it is not possible to avoid opening the door, please do so very slowly and carefully, paying attention to the hot steam coming out of the oven cavity.
- **WARNING:** Wear appropriate protective thermal clothing and exercise extreme caution when moving containers, accessories and other objects inside the oven cavity.
- **WARNING:** DO NOT put highly flammable or heat-sensitive objects (e.g. plastic ornaments, lighters, etc.) near the appliance.

- WARNING: The first time you use the appliance, some of the oils used for manufacturing may evaporate and produce fumes or unpleasant odours. These will gradually disappear as you continue to use the appliance.
- WARNING: Liquids or other foods should not be reheated in sealed containers, as these may explode.
- WARNING: To avoid burns, do not use containers filled with liquids or products that liquefy, heating up to higher levels than can be easily observed (IEC 60335-2-42: 2002 / AMD1: 2008).
- WARNING: The contents of any baby bottles or jars of baby food must be mixed or shaken, and the temperature checked before consumption, to avoid scalding.



Risk of fire

- WARNING: Before using the appliance, make sure that there are no non-compliant objects (instruction manuals, plastic bags, etc.) or detergent residues inside the oven cavity. Also make sure that the flue is free of obstructions and that there are no flammable materials in the vicinity.
- WARNING: When reheating food in plastic or paper containers, check the oven. Risk of fire.

- **WARNING:** If you notice any smoke coming from the appliance, switch off or remove the appliance plug and keep the door closed to extinguish any flames.
- **WARNING:** Do not place sources of heat (grills, fryers, etc.), highly flammable substances or fuels (diesel, petrol, bottles of alcohol, etc.) near the appliance.
- **WARNING:** Clean the oven daily, removing any food residue. Follow the detailed cleaning instructions on page 34. Failure to clean the oven could cause the surfaces to deteriorate. This could reduce the life of the appliance and cause danger (if not removed, fats or food residue on the inside could catch fire).
- **WARNING:** Do not use highly flammable food or liquids while cooking (e.g. alcohol).
- **WARNING:** Do NOT clean using flammable detergents or detergents with potentially flammable substances. Only use UNOX SPRAY&Rinse or warm soapy water.



Risk of electric shock

- WARNING: Do not open the compartments marked with these symbols. Only qualified personnel authorised by UNOX may access these compartments. Failure to observe this regulation invalidates the warranty* and may cause damage or injury including death.
-  WARNING: Any routine maintenance must be performed:
 - after waiting for the appliance to cool down fully;
 - only if you are in good mental and physical condition, and are wearing suitable personal protective equipment (e.g. heat-resistant rubber gloves, eye protection, dust mask (optional), etc.).
- WARNING: Do not clean the outside of the appliance with steam or pressurised water jets.

The manufacturer reserves the right to make changes to improve the appliances and accessories at any time without advance notice. Full or partial reproduction of this manual is forbidden without the consent of the manufacturer. The measurements provided are approximate and not binding. In the event of disputes, this document was originally written in English. The manufacturer is not responsible for any translation/interpretation errors.

Installation

for qualified installers only

Transporting the
appliance 14

Unpacking the
appliance 16

Checking
package
contents 18

Getting started 19

Positioning 20

Collegamento
elettrico 14

Flue connections 28

TRANSPORTING THE APPLIANCE

03 ► The appliance must be transported:

- in full compliance with laws on accident prevention and the regulations in force;
- by authorised and trained personnel in good physical and mental condition, equipped with PPE (personal protective equipment);
- after making sure there are no people or things in the manoeuvring area that could get in the way;
- after making sure the packaging fits easily through the doors.
- after making sure that the floor is perfectly smooth, level and even, as well as being able to bear the load. The floor must not be slippery.





The manufacturer shall not be held liable for any inconvenience caused by transportation carried out in any other conditions.

During transportation or storage, the appliances must NOT be stacked.

The appliances must NOT be moved manually, with straps, or by dragging or pushing them.

If the packaging is visibly damaged, promptly contact the manufacturer. DO NOT install the appliance.

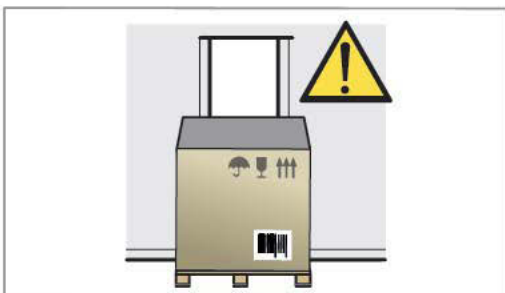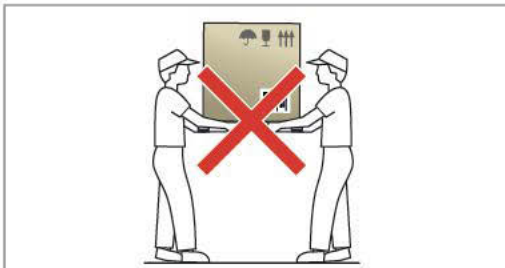

UNPACKING THE APPLIANCE

02 ► After unpacking the appliance, check for any visible damage. If it is damaged, promptly contact the manufacturer and DO NOT install the appliance.


 The packaging material is potentially dangerous. It must be kept out of the reach of children and animals, and correctly disposed of in compliance with local regulations.

NON-STOP Efforts

UNOX has, for years, adopted the philosophy of increasing the environmental compatibility of its products, and reducing energy consumption and waste. UNOX wishes to protect the environment and invites the consumer to dispose of waste in recycling bins.

A | Technical data table

Tray	342x242	460x330	
	X*NA 03QS-MADN	X*NA 03HS-MADN	X*NA 03HS-MADP
Humidity	NO	NO	YES
No. trays	3	3	3
Voltage [V]	220-240	220-240	220-240
Phase	single-phase		
Tot. elect. power [kW]	3	3	3
Heating power [kW]	2.9	2.9	2.9
Plug	Schuko (3G1.5)	Schuko	Schuko
Size [W x H x D - mm]	480x466x550	600x466x611	

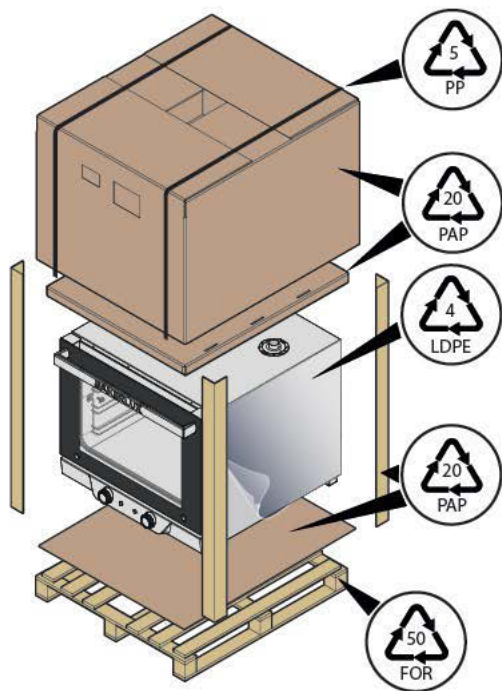

02

460x330		600x400			
X*NA 04HS- MADN	X*NA 04HS- MADV	X*NA 03EU- MADN	X*NA 03EU- MADV	X*NA 04EU- EADN	X*NA- 04EU- EA*V
NO	YES	NO	YES	NO	YES
4	4	3	3	4	4
220-240	220-240	220-240	220-240	220-240	220-240
single-phase				single-phase and three-phase	
3	3	3	3	5.3	6.5
2.9	2.9	2.9	2.9	4.9	5.8
Schuko	Schuko	Schuko	Schuko	No plug (5G1,5)	
600x546x611		800x542x714		800x622x714	

CHECKING PACKAGE CONTENTS

03 ► Before installing the appliance, check that the following components are included in the package and are undamaged:


- BAKERLUX CLASSIC™ oven;
- trays 342x242 mm | 460x330 mm the quantity depends on the model;
- technical documentation (use and installation manual, "Technical specifications" sheet);
- oven positioning feet;
- yellow "Risk of liquid spillage" label.



If a component is missing or damaged, do not install the appliance. Please contact the manufacturer.



The BAKERLUX CLASSIC™ range also includes various professional accessories. Please contact UNOX for additional information.

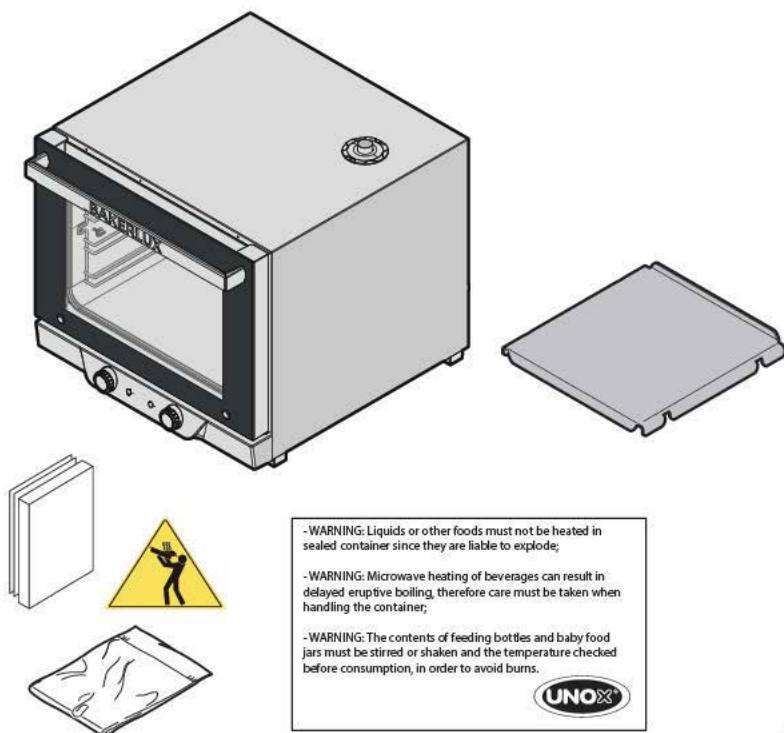

GETTING STARTED

04 ► Removing the protective film

Slowly remove the protective films from the appliance. Clean any glue residue with appropriate solvents without using tools, abrasive detergents or acids that could spoil the surfaces.


 The protective films are potentially dangerous and must be kept out of the reach of children and animals, and correctly disposed of in compliance with local regulations.



04

05 ► Appliance labels

For safety reasons, the last tray should NOT be placed above 160 cm | 63". Should you need to do this, the label on the side of the appliance indicates that you must exercise caution when removing trays from the oven cavity, as they may contain boiling hot cooking liquids.

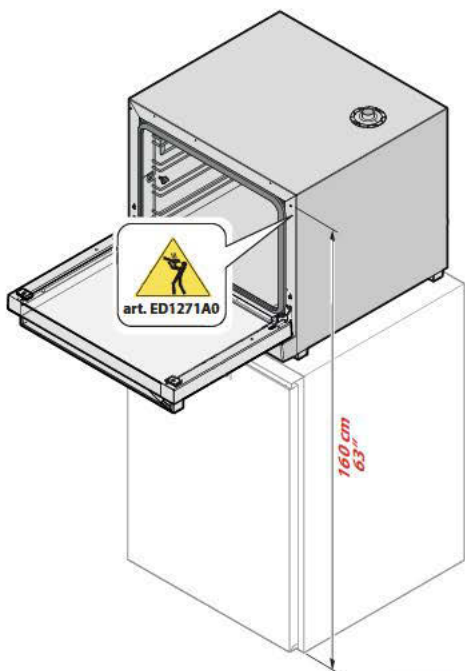

05

POSITIONING

06 ► The installation area

Install the appliance in areas that:

- specific for this purpose and compliant for cooking industrial foods;
- that are adequately ventilated;
- that comply with the laws in your country regarding system safety/safety in the workplace;
- protected from the weather;
- with temperatures from +5°C to +35°C maximum;
- that have maximum humidity of 70%.

The floor or structure beneath the appliance must:

- be flame and heat resistant;
- be perfectly level;
- have a flat and even surface;
- be able to support the weight of the appliance at full load without deforming or undergoing structural failure.

⊕ For additional technical information on the appliance, please see the “Technical specifications” sheet provided with the appliance.



07 ► Installation clearance

Position the appliance respecting the clearance indicated in the figure and so that the back of the appliance is easily accessible for making the necessary connections and for maintenance work. The appliance is not suitable for recessed installation.

Do not install the appliance near:



- other appliances that reach high temperatures;
- easily flammable or heat-sensitive materials, walls or furniture.

If this is not possible, a fireproof panel must be installed in accordance with local fire prevention regulations.

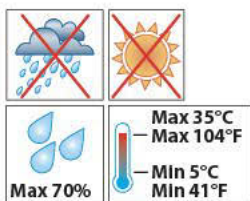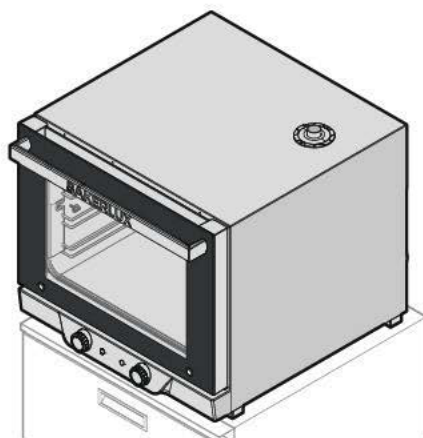

06

07

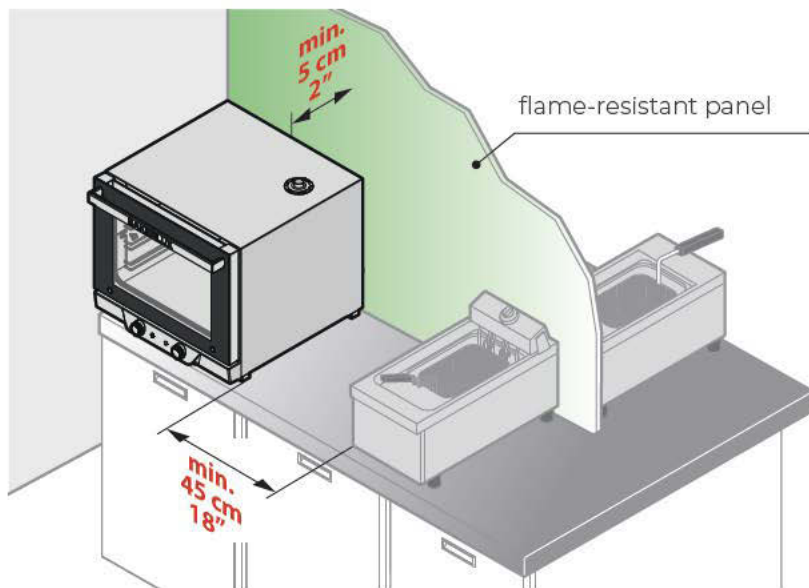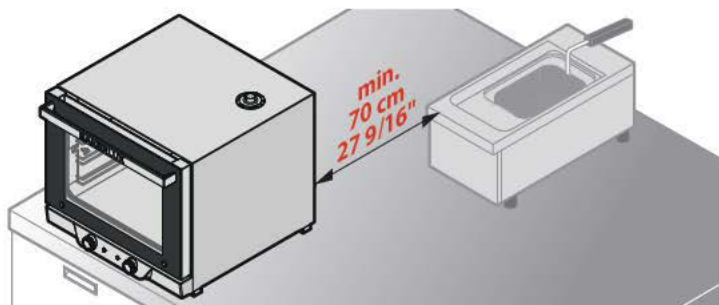


Positioning

NEVER install the appliance on the floor. It must be positioned:

- on a structure (e.g. neutral cabinets)
- on an UNOX stand (with or without castors)
- on a LIEVOX™ prover.

The feet must be mandatorily installed on the equipment (they are supplied inside the packaging). DO NOT operate the equipment without the feet installed. Insert the snap-in feet as shown in the figure.

08

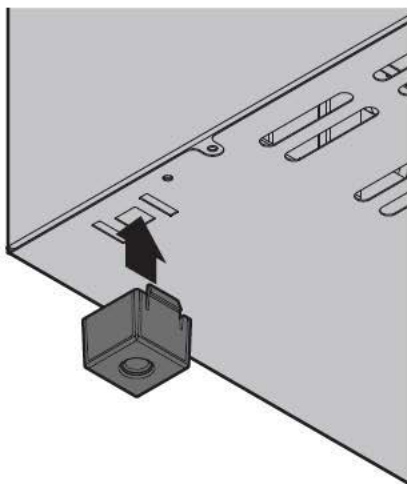


08

09 ► positioning: customer's own substructure

Before securing the appliance to a structure, always check it is perfectly level using a manual or digital spirit level.

Any structures used must be:

- stable and perfectly level;
- unmoveable;
- suitably sized for the appliance requiring support;
- heat resistant and NOT flammable;
- able to support the appliance weight at full load without deforming or experiencing structural failure.

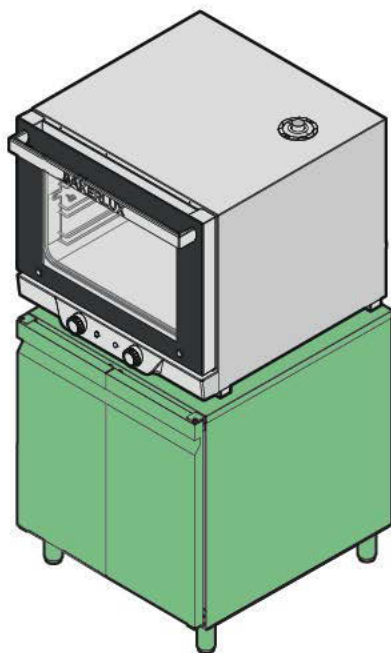


positioning on a
substructure

09

Electrical connections

-  Before installing the appliance, read chapter “Safety information for installing the appliance” on page 4 carefully.
 -  Connections to the mains power and the electrical system must comply with the regulations in force in the country where the appliance is installed. All connections must be made by qualified personnel authorised by UNOX. Failure to comply with these regulations may cause damage and injuries, invalidates the warranty* and relieves UNOX of all liability.
 -  Each appliance must have its own power socket. Do not use adapters or extension leads. If the power cable is already fitted to the appliance, it cannot be extended or joined in any way. Do not roll up the cable if it is too long. Ensure the cable is not pinched, squashed or a tripping hazard for anyone passing by.
- 10 ► Before connecting the appliance to the mains electricity, always compare the power supply data with the appliance data as specified on the ratings plate.

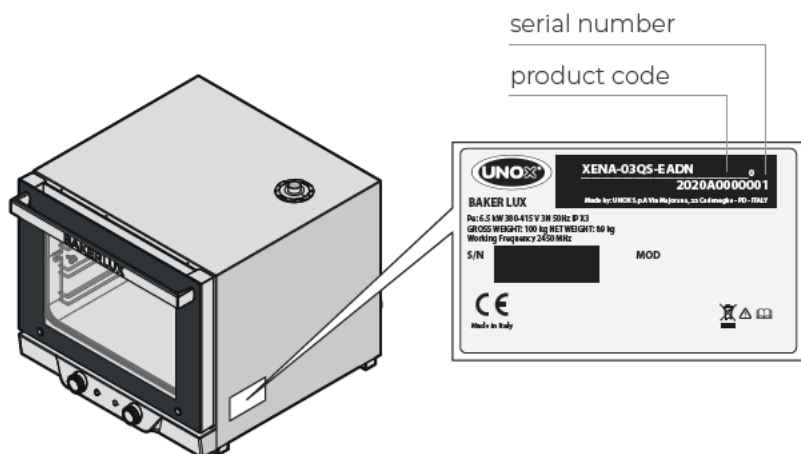



In order to avoid hazards due to the accidental resetting of the thermal cut-out, this appliance must not be powered with an external switching device, such as a timer, or be connected to a circuit that is regularly switched on and off by the utility.



The cable must be replaced by UNOX, the UNOX technical assistance

service or, in any case, by a person with a similar role in order to prevent any risks.



The wiring diagrams, cable specifications and technical data are indicated on the "Technical specifications" sheet (Power supply - Connection Diagram) supplied with the appliance.

Appliance with a Schuko plug

The appliance is released from the factory with the power cable and plug already connected to the terminal. Do not make any other type of electrical connection or dimensional modification to the cable other than extensions, replacing it only with a cable with the same specifications as the original factory cable (type of rubber, cross-section, etc.).

Checks

- The copper jumper and the electrical cable must be secured together under the screw, in the direction of its tightening. Carefully tighten the electrical connections before connecting the appliance to the power mains.
- Check for any electrical dispersion between the phases and the earth, and for electrical continuity between the external casing and the mains earth.
- Check that the power supply voltage does not deviate from the nominal voltage specified on the appliance ratings plate when the appliance is operating. If it does, wire the phases as specified on the "Technical specifications" sheet supplied.

Adapting to different voltages

For electrical and voltage requirements that differ from standard values (400V ~ 3PH + N+PE 50/60 Hz), replace the power supply cable and connect the new cable to the terminal board, following the diagrams on the "Technical specifications" sheet (Power supply - Connection Diagram) supplied with the appliance.

Replacing the power supply cable



The cable must be replaced by UNOX, the UNOX technical assistance

service or, in any case, by a person with a similar role in order to prevent any risks.

Follow the procedures below to replace the power supply cable:

- open the terminal board cover by releasing the two lower flaps;
- remove the cable installed by detaching it from the terminal board;
- see the "Technical specifications" sheet (Power supply - Connection Diagram) which shows all of the possible wiring diagrams and the new cable spec according to the chosen connection (Cable Type);
- secure the new cable;
- close the terminal board cover.

Plumbing connections


Water connection: incoming water

11 ► The appliances must be connected to the water mains (the image refers only to models: X*NA-03HS-MADP | X*NA-04HS-MADV | X*NA-03EU-MADV | X*NA-04EU-EA*V).

Inside the oven there is a solenoid valve, already installed at the factory.

! Use the set of new couplings (provided with the appliance) to connect the appliance to the water mains. Do not re-use previously used couplings.

Before connecting the water pipe to the appliance, flush out the pipe with water to eliminate any residues. A shut-off valve should be positioned between the water mains and the appliance.

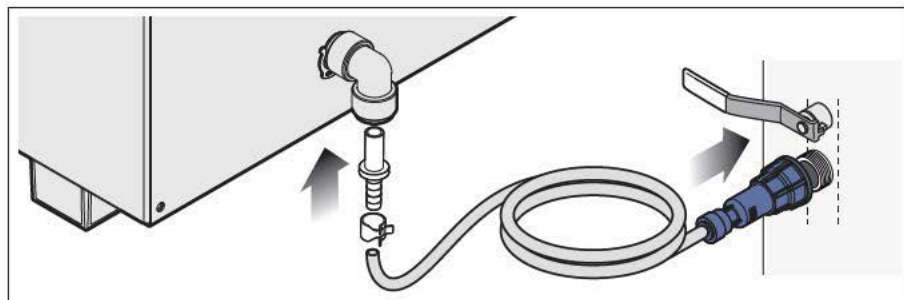

11

Inlet water characteristics

The incoming water must:

- have a maximum temperature of 30 °C | 86°F;
- be drinkable;
- be pressured at between 150 kPa and 600 kPa (200 kPa recommended).

! The incoming water supply must be free from chloramine or have a level below 0.1 ppm (mg/L). Note: any damage caused by excess chloramine is not covered by the warranty.

Indicator for assessing corrosion probability

Formula: $NHM = EC - (TH^{**} \times 30)$

EC = electrical conductivity [$\mu S/cm$]

TH = total hardness** [$^{\circ} dH$ - German degrees]

The maximum chloride content, Cl^{-} , is not a fixed value; it depends on the calculated Non Hardness Measurement (NHM)

NHM $\leq 250 \mu S/cm$	TH < $8^{\circ}dH$, $Cl^{-} \leq 25 ppm$ (5 drops of reagent*)	No water treatment
	TH $\geq 8^{\circ}dH$, $Cl^{-} \leq 25 ppm$ (5 drops of reagent*)	UNOX.Pure
	$Cl^{-} > 25 ppm$ (5 drops of reagent*)	UNOX.Pure-RO
NHM = $250 - 350 \mu S/cm$	$Cl^{-} \leq 20 ppm$ (4 drops of reagent*)	UNOX.Pure
	$Cl^{-} > 20 ppm$ (4 drops of reagent*)	UNOX.Pure-RO
NHM = $350 - 450 \mu S/cm$	$Cl^{-} \leq 15 ppm$ (3 drops of reagent*)	UNOX.Pure
	$Cl^{-} > 15 ppm$ (3 drops of reagent*)	UNOX.Pure-RO
NHM = $450 - 500 \mu S/cm$	$Cl^{-} \leq 10 ppm$ (2 drops of reagent*)	UNOX.Pure
	$Cl^{-} > 10 ppm$ (2 drops of reagent*)	UNOX.Pure-RO
NHM $\geq 500 \mu S/cm$		UNOX.Pure-RO

* use the reagent in the UNOX KSTR1081A kit

** hardness measured using the UNOX KSTR1082A kit

UNOX recommends its UNOX.Pure filters where there are low pressure values or the water is particularly hard. For information on assembly/ replacement, please see the instructions inside the packaging.


FLUE CONNECTIONS

12 ► Cooking produces hot fumes and odours that are evacuated through an outlet pipe on the back of the appliance.

 Always make sure that there are no objects and/or materials obstructing the flue or which may be damaged by the temperature or fumes. Do not leave flammable materials near the flue.


If you are cooking any of these types of food (chicken, raw bacon, raw sausages, steak), check your local HVAC codes or contact your local authority to ensure you comply with ventilation requirements. For these types of food, the fumes can be evacuated by means of an extractor hood of suitable capacity and size for the type of appliance. The appliance is equipped with catalytic converters which are located behind the inner wall of the oven cavity. These are used for cleaning the recirculation air flow. The catalyst works by lowering the combustion temperature of the fat entering the air flow. Some compound molecules, including VOs (Volatile Organic Compound), are broken down into simpler molecules such as CO_2 and H_2O as it passes through the catalyst. The catalyst will work more efficiently at temperatures above 220°C |

428°F . If the catalyst is exposed to chemical detergents containing phosphates, NaOH , silicates, Na and potassium salts, irreversible damage may be caused. These chemicals are found in most commercial degreasers and detergents; therefore, we recommend using SPRAY&Rinse™ detergent, specifically designed for BAKERLUX CLASSIC™ to maintain oven performance.

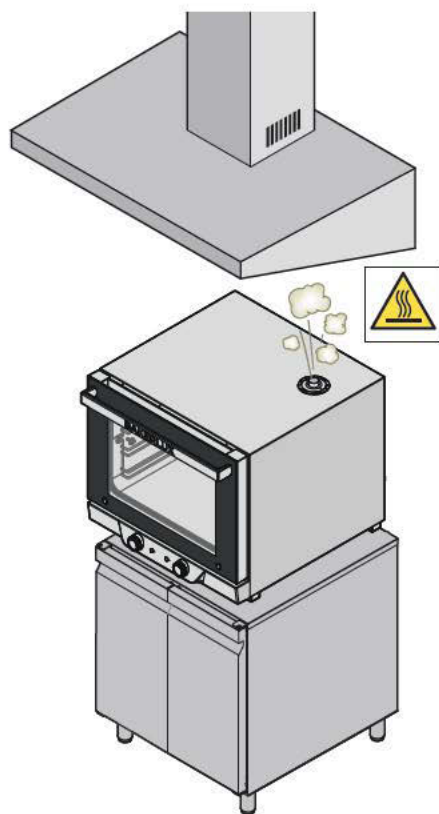

Use


USING THE OVENS

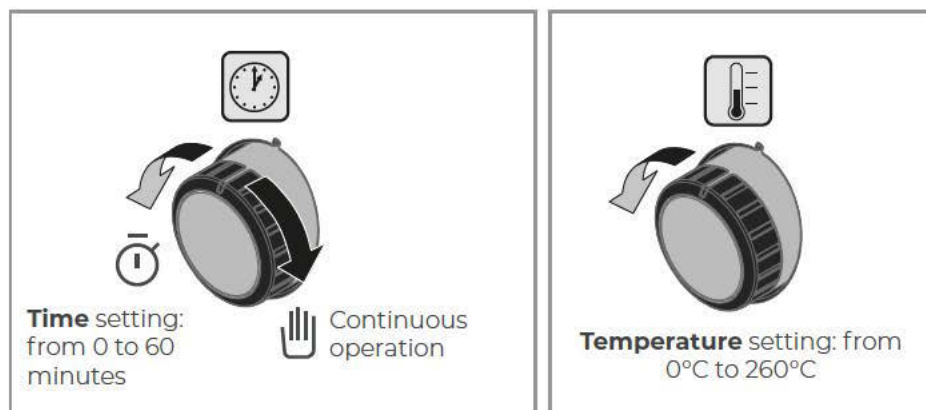

Warning LED: it turns on when the timer is set.

Warning LED: it turns on when the oven is heating and turns off when it has reached the correct temperature

USING THE OVENS WITH A STEAM GENERATOR

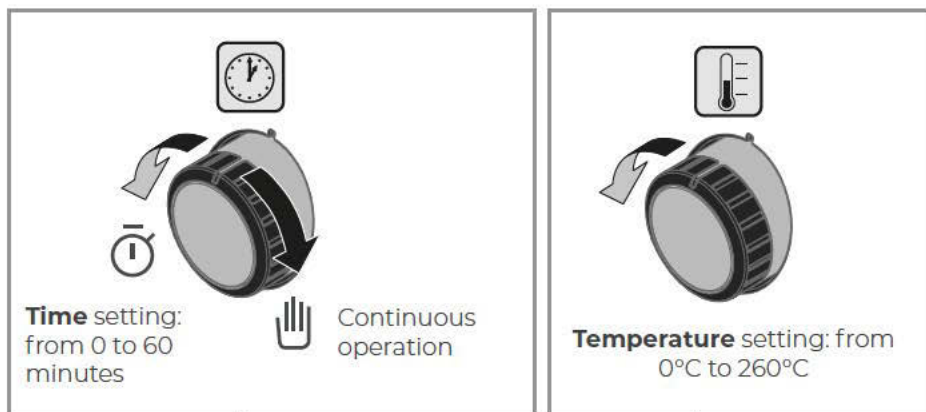

Steam generator button. Hold it down to release the humidity in the oven cavity.

Warning LED: it turns on when the oven is heating and turns off when it has reached the correct temperature

Maintenance

Safety
information for
maintaining the
appliance

32

Inactivity

36

Disposal

37

SAFETY INFORMATION FOR MAINTAINING THE APPLIANCE



Any routine cleaning procedure must be performed:

- in perfect psychophysical shape
- after disconnecting the appliance from the power and water supplies;
- after having put on the proper personal protective equipment (e.g. rubber gloves, etc.).

Clean the appliance on a daily basis in order to maintain a good level of hygiene and to prevent the stainless steel from corroding or deteriorating.



Daily cleaning also reduces the possibility of accumulated fatty substances or food residues inside the cavity catching fire and becoming a fire hazard.

When cleaning any component or accessory
NEVER use:

When cleaning any component or accessory
NEVER use:

- abrasive, pointy or sharp tools or cloths (abrasive sponges, scrapers, steel-bristled brushes, etc.);
- steam or pressurised water jets;
- abrasive or powder detergents;
- alkaline, aggressive, caustic or corrosive detergents (e.g. hydrochloric/muriatic or sulphuric acid or caustic soda). These substances could cause permanent damage to the appliance surfaces and catalysts.

 Do not use these substances even when cleaning the appliance substructure or the floor under the appliance. The volatile emissions from these compounds may still cause damage.

ROUTINE MAINTENANCE

13 ► Cleaning the external surfaces

- Wait for the surfaces to cool off.
- Use only a soft cleaning cloth dampened with a little soap and water.
- Rinse and dry thoroughly.
- Alternatively, only use detergents recommended by UNOX. Other products may cause damage, invalidating the warranty. Read the usage instructions provided by the detergent manufacturer.

Cleaning the oven door's internal and external glass

- Wait for the windows to cool off.
- Use only a soft cleaning cloth dampened with soapy water or a specific glass cleaner.
- Rinse and dry thoroughly.
- 14 ► For more thorough cleaning, you can open the internal glass as indicated in the figure. After cleaning, lock the internal glass using the brackets.

Cleaning the oven cavity



WARNING: Failure to clean the oven cavity daily as described may cause the accumulated grease and food residues to catch fire – this is a fire hazard.

Follow the procedure below to clean the oven cavity:

- -turn on the oven and set the temperature to 55°C and the steam to 100%;
- leave the oven running for 10 minutes;
- wait for the surfaces to cool off and clean using a soft cloth;
- rinse thoroughly to remove any residue.


Remove the side grill racks to facilitate cleaning. Clean them with soapy water or a specific detergent (not dishwasher-friendly).

Plastic surfaces and control panel

Use only a very soft cleaning cloth and a small amount of detergent to clean delicate surfaces.



13

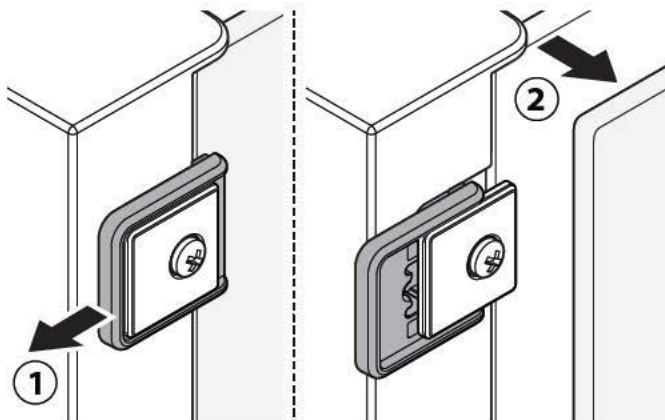

14

INACTIVITY

During periods of inactivity, take the following precautions:

- disconnect the appliance from the power supply;
- preferably rub a soft cloth lightly doused with Vaseline oil on all stainless steel surfaces;
- keep the appliance door slightly ajar.

Before reusing the appliance:

- clean the appliance and accessories thoroughly (see page 34);
- reconnect the appliance to the power supply;
- inspect the appliance before using it again;
- restart the appliance for at least 50 minutes without any food inside and with the microwave set to 0%.

- ⊕ To ensure that the appliance is in perfect condition in terms of use and safety, maintenance and inspections should be performed at least yearly by an authorised support service centre.

DISPOSAL

Pursuant to article 13 of Italian Legislative Decree 49 of 2014

"Implementation of the WEEE Directive 2012/19/EU on waste electrical and electronic equipment"



The crossed-out wheellie bin symbol specifies that the product was placed on the market after 13 August 2005 and that at the end of its useful life it should be collected separately and not disposed of with other waste. All appliances are made with recyclable metals (stainless steel, iron, aluminium, galvanized steel, copper, etc.) in percentages above 90% by weight. Before disposal, ensure the appliance is unusable by removing the power cable and all compartment or cavity closure devices (where present). At the end of its useful life, the product must be disposed of in such a way as to reduce any negative impact on the environment and make efficient use of available resources. Prefer prevention, preparation for reuse, recycling and reclamation, and remember "the polluter pays". Please remember that illegal or incorrect disposal of the product incurs penalties, as provided for by current legislation.

Information on disposal in Italy

In Italy, WEEE appliances must be delivered to:

- recycling centres (also known as waste disposal sites/facilities)
- the dealer from whom the new appliance is purchased, who is required to collect them free of charge ("one-for-one" collection).

Information on disposal in European Union countries

The EU Directive on WEEE appliances has been implemented differently by each country. Therefore, if you want to dispose of this appliance, we recommend you contact your local authority or dealer for information on the correct disposal method.



INVENTIVE SIMPLIFICATION

EUROPE

IT - ITALIA UNOX S.p.a

E-mail: info@unox.it
Tel: +39 049 8657511

GB - UNITED KINGDOM UNOX UK Ltd.

E-mail: info@unoxuk.com
Tel: +44 1252 851 522

CZ - ČESKÁ REPUBLIKA UNOX DISTRIBUTION s.r.o.

E-mail: info.cz@unox.com
Tel: +420 241 940 000

BG - БЪЛГАРИЯ UNOX BULGARIA

E-mail: info.bg@unox.com
Tel: +359 2 419 05 00

NL - NETHERLANDS UNOX NETHERLANDS B.V.

E-mail: info.nl@unox.com
Tel: +31 6 27 21 14 10

DE - DEUTSCHLAND UNOX DEUTSCHLAND GMBH

E-mail: info.de@unox.com
Tel: +49 2951 98760

IE - IRELAND UNOX IRELAND

E-mail: info.ie@unox.com
Tel: +353 (0) 87 32 23 218

HR - HRVATSKA UNOX CROATIA

E-mail: narudzbe@unox.com
Tel: +39 049 86 57 538

AT - ÖSTERREICH UNOX ÖSTERREICH GMBH

E-mail: info.de@unox.com
Tel: +43 800 880 963

PL - POLSKA Unox Polska Sp. z o.o.

E-mail: info.pl@unox.com
Tel: +48 665 232 000

FR - FRANCE, BELGIUM & LUXEMBOURG UNOX FRANCE s.a.s.

E-mail: info.fr@unox.com
Tel: +33 4 78 17 35 39

ES - ESPAÑA UNOX PROFESIONAL ESPAÑA S.L.

E-mail: info.es@unox.com
Tel: +34 900 82 89 43

TR - TÜRKİYE - UNOX TURKEY Profesyonel mutfak ekipmanları endüstri ve ticaret limited şirketi

E-mail: info.tr@unox.com
Tel: +90 530 176 62 03

RU - РОССИЯ, ПРИБАЛТИКА И СТРАНЫ СНГ UNOX РОССИЯ

E-mail: info.ru@unox.com
Tel: +7 [499] 702 - 00 - 14

SC - SCANDINAVIAN COUNTRIES UNOX SCANDINAVIA AB

E-mail: info.se@unox.com
Tel: +46(0) 790 75 63 64

PT - PORTUGAL UNOX PORTUGAL

E-mail: info.pt@unox.com
Tel: +351 918 228 787

AMERICA

US - U.S.A. & CANADA UNOX Inc.

E-mail: info.usa@unox.com
Tel: +1 800 489 8669

AR - ARGENTINA UNOX ARGENTINA

E-mail: info.ar@unox.com
Tel: +54 911 37 58 43 46

CO - COLOMBIA UNOX COLOMBIA

E-mail: info.co@unox.com
Tel: +57 350 65 88 204

BR - UNOX BRASIL SERVICOS LTDA.

E-mail: info.br@unox.com
Tel: +55 11 98777-8201

MX - MEXICO UNOX MEXICO, S. DE R.L. DE C.V.

E-mail: info.mx@unox.com
Tel: +52 55 8116-7720

ASIA, OCEANIA & AFRICA

ZA - SOUTH AFRICA UNOX SOUTH AFRICA

E-mail: info.asia@unox.com
Tel: +27 845 05 52 35

PH - PHILIPPINES UNOX PHILIPPINES

E-mail: info.asia@unox.com
Tel: +63 9173108084

AU - AUSTRALIA UNOX AUSTRALIA PTY Ltd.

E-mail: info@unoxaustralia.com.au
Tel: +61 3 9876 0803

UZ - UZBEKISTAN UNOX PRO LLC

E-mail: info.uz@unox.com
Tel: +998 90 370 90 10

KR - 대한민국 UNOX KOREA CO. Ltd.

이메일: info.asia@unox.com
전화: +82 2 69410351

AC - OTHER ASIAN COUNTRIES UNOX (ASIA) SDN. BHD

E-mail: info.asia@unox.com
Tel: +603-58797700

TW - TAIWAN, HONG KONG & MACAU UNOX TAIWAN

E-mail: info.tw@unox.com
Tel: +886 928 250 536

MY - MALAYSIA & SINGAPORE UNOX (ASIA) SDN. BHD

E-mail: info.asia@unox.com
Tel: +603-58797700

CN - 中华人民共和国 UNOX TRADING (SHANGAI) Ltd. CO.

电子邮件: info.asia@unox.com
电话: +603-58797700

NZ - NEW ZEALAND UNOX NEW ZEALAND Ltd.

E-mail: info@unox.co.nz
Tel: +64 [0] 800 76 0803

AE - U.A.E. UNOX MIDDLE EAST DMCC

E-mail: info.uae@unox.com
Tel: +971 4 554 2146

ID - INDONESIA UNOX INDONESIA

E-mail: info.asia@unox.com
Tel: +62 81908852999

unox.com



L13566A0

All images are used for illustrative purposes only.
All the features described in this catalogue are subject to change and may be updated without prior notice.